



NATIONAL INTERAGENCY INCIDENT COMMUNICATIONS DIVISION MIDLAND PORTABLE RADIO PROGRAMMING GUIDE

Page 1 of 3, Version 2012



1. Select a group and channel you wish to program. (See Figure 1)
Note: To change groups, press the "Zone" softkey. Enter the zone number via the key pad and press the "OK" softkey.
OR
Press the "Zone" softkey. Press the UP/Down keypad keys to desired zone and press the "OK" softkey.

 


Figure 1

2. Select the "Menu" softkey, scroll down/up to "Channel Parameters" and press the "Select" softkey. (See Figure 2)
3. Scroll down/up to "Channel" and press the "Select" softkey to enter channel programming mode.
4. Enter a 5-Digit Password and press the "OK" softkey. **NIICD Password is "00000"** (See Figure 3)
5. Scroll up/down to desired channel and press the "Select" softkey to enter channel parameters. (See Figure 4)

 


Figure 2

Channel Parameters

6. **Channel Mode: Default is set to "Analog".** (See Figure 5)
To change setting, press the "Edit" softkey and scroll up/down to select "Analog, Digital, or Multi" and press the "OK" softkey.
7. **RX Frequency:** Press the "Edit" softkey to edit the RX Frequency. Press the "C" key several times to clear the frequency and enter the new RX Frequency and press the "OK" softkey. (See Figure 6)
8. **TX Frequency:** Press the "Edit" softkey to edit the TX Frequency. Press the "C" key several times to clear the frequency and enter the new TX Frequency and press the "OK" softkey. (See Figure 7)
9. **TX Power: Default is set to Medium (2 Watts).**
To change setting, press the "Edit" softkey and scroll up/down to select "Low, Medium, or High" Power and press the "OK" softkey.
10. **Channel Name:**
To change the channel name, press the "Edit" softkey and press the "C" key several times to clear the channel name. Enter a new channel name via the numeric key pad and press the "OK" softkey.
11. **TX Timeout: Default is set to "Yes". Timer is set to 120 seconds.**
To change setting, press the "Edit" softkey and scroll up/down to select "No or Yes" and press the "OK" softkey.
12. **RX Tone Type: Default is set to "CCS".**
To change setting, press the "Edit" softkey and scroll up/down to select "CCS or DCS" and press the "OK" softkey.
13. **RX Tone: Default is set to "None".**
To change setting, press the "Edit" softkey and scroll up/down to select desired tone from list and press the "OK" softkey.
14. **TX Tone Type: Default is set to "CCS".**
To change setting, press the "Edit" softkey and scroll up/down to select "CCS or DCS" and press the "OK" softkey.
15. **TX Tone: Default is set to "None".**
To change setting, press the "Edit" softkey and scroll up/down to select desired tone from list and press the "OK" softkey.
16. **Chan. Spacing: Default is set to "12.5Khz". Narrowband**
To change setting, press the "Edit" softkey and scroll up/down to select either "12.5Khz or 15Khz" and press the "OK" softkey.
17. **ANI Type: Default is set to "None".**
To change setting, press the "Edit" softkey and scroll up/down to select either "None, 5-Tone, or DTMF" and press the "OK" softkey.
18. **Selcall Type: Default is set to "None".**
To change settings, press the "Edit" softkey and scroll up/down to select "None, 2-Tone, or 5-Tone" and press the "OK" softkey.
19. Once all parameters are entered, press the "Exit" softkey. (See Figure 8)
Display will show "Save Changes Permanently?", press the "Yes" softkey key to save all the entered channel parameters.

 


Figure 3

 


Figure 4

 


Figure 5

 


Figure 6

 


Figure 7

 


Figure 8



NATIONAL INTERAGENCY INCIDENT COMMUNICATIONS DIVISION MIDLAND PORTABLE RADIO SETTINGS/OPTIONS GUIDE Page 2 of 3, Version 2012



CHANGING ZONES

To change groups, press the "Zone" softkey. Enter the zone number via the key pad and press the "OK" softkey.

OR

Press the "Zone" softkey. Press the UP/Down keypad keys to desired zone and press the "OK" softkey.

ENABLING/DISABLING SCAN

To Enable Scan - Press the "Scan" softkey. The display will indicate the radio is scanning by a "Z" icon in the upper right corner.

To Disable Scan - Press the "Scan" softkey.

Note: Pressing the "Menu" softkey while scanning will also disable scan.

ADD/REMOVE CHANNEL FROM SCAN LIST

To Add a Channel - Press the "Menu" softkey, scroll down to "Channel Parameter" using the up/down softkeys and press the "Select" softkey.

Scroll down to "Channel Scan" and press the "Select" softkey.

Scroll down/up to desired channel and press the "Select" softkey. Scroll to "Add to List", "1st Priority" or "2nd Priority" and press the "OK" softkey.

Press the "Exit" softkey, and continue adding more channels to the scan list.

Once complete, press "Exit" twice to close scan edit list.

To Remove a Channel - Repeat the process and select "Remove".

TX Power Selection

Press the "F1" side button to cycle between

HI/MID/LOW power settings.

Note: H= HI Power/ M=Medium Power/ L=Low Power

LOCKING KEYPAD

Press the "Lock" softkey once to lock key pad.

Press the "Lock" softkey once more then press the

"Unlock" softkey to unlock keypad.



NATIONAL INTERAGENCY INCIDENT COMMUNICATIONS DIVISION MIDLAND BASIC OPERATION AND RADIO CONTROLS

Page 3 of 3, Version 2012



1. Turn power **ON** by turning the ON/OFF Volume Knob clockwise.
The LCD will indicate the current channel label.
2. Select a zone number by pressing the appropriate the "**Zone**" softkey. Enter the zone number via the key pad and press the "**OK**" softkey.
OR
Press the "**Zone**" softkey. Press the UP/Down keypad keys to desired zone and press the "**OK**" softkey.
3. Select a channel by turning the Channel Select Knob to one of the 16 available positions.
4. Adjust the volume by pressing the "**F2 Squelch**" button once to open the squelch and set the volume to desired level, press the "**F2 Squelch**" key once more to close Squelch. The radio is now ready to RECEIVE on that current group and channel.
6. To transmit, press and hold the Push-To-Talk (**PTT**) button on the side of the radio.
Note: *The Transmit Indicator Light should glow red while transmitting.
If not, the battery may be low or the channel is RX only or busy.*
7. Pause 1 second and talk in a normal voice into the microphone.
Note: *Try to shield the microphone from wind and other loud background noises for clearer transmissions.*
8. Release the PTT to stop transmitting and receive incoming transmissions.



Figure 1: Front View Midland

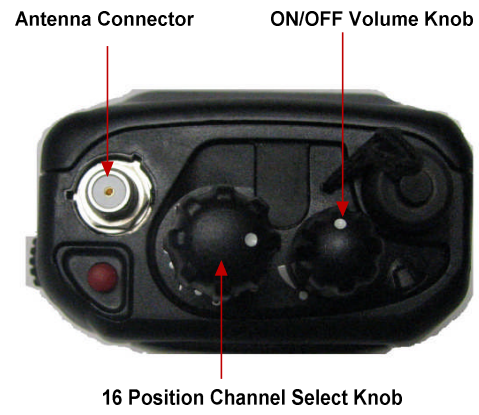


Figure 2: Top View Midland