 
 




1. Select a group and channel needed to program.

2. Programming a Channel (Analog Only)

- Select "**Menu**" softkey, scroll up/down to "**Channel Parameters**" and press the "**Select**" softkey
- Scroll up/down to "**Channel**" and press the "**Select**" softkey. Enter a 5-Digit password and press "**OK**".
Note: NIICD Password is "00000"
- Scroll up/down to desired channel and press the "**Select**" softkey.
- **Channel Mode:** Press "**Edit**" and scroll up/down to select "**Analog, Digital, or Multi**" and press "**OK**".
- **RX Freq:** Press "**Edit**", then press "  " several times to clear and enter a new RX Freq and press "**OK**".
- **TX Freq:** Press "**Edit**", then press "  " several times to clear and enter a new TX Freq and press "**OK**".
- **TX Power:** Press "**Edit**" and scroll up/down to select "**Low, Medium, or High**" and press "**OK**".
Note: NIICD Default is Medium (2 Watts)
- **Channel Name:** Press "**Edit**", then press " " several times to clear and enter new name via the alphanumeric keypad and press "**OK**" when done.
- **TX Timeout:** Press "**Edit**" and scroll up/down to select "**No or Yes**" and press "**OK**".
Note: NIICD Default is set to "Yes", timer is set to 120 seconds.
- **RX Tone Type:** Press "**Edit**" and scroll up/down to select "**CCS or DCS**" and press "**OK**".
- **RX Tone:** Press "**Edit**" and scroll up/down to select desired tone from list and press "**OK**".
- **TX Tone Type:** Press "**Edit**" and scroll up/down to select "**CCS or DCS**" and press "**OK**".
- **TX Tone:** Press "**Edit**" and scroll up/down to select desired tone from list and press "**OK**".
- **Channel Spacing:** Press "**Edit**" and scroll up/down to select "**12.5Khz or 15Khz**" and press "**OK**".
Note: Narrowband is "12.5Khz", Wideband is "15Khz"
- **ANI Type:** Press "**Edit**" and scroll up/down to select "**None, 5-Tone, or DTMF**" and press "**OK**".
- **Selcall Type:** Press "**Edit**" and scroll up/down to select "**None, 2-Tone, or 5-Tone**" and press "**OK**".
- Once all parameters are entered, press the "**Exit**" key. Press "**Yes**" when display shows "**Save Changes Permanently?**".

NIICD Midland Radios ONLY.

MIDLAND SETTINGS AND OPTIONS


CHANGING ZONES


To change groups, press the "**Zone**" softkey. Enter the zone number via the key pad and press the "**OK**" softkey.

OR

Press the "**Zone**" softkey. Press the UP/Down keypad keys to desired zone and press the "**OK**" softkey.

ENABLING/DISABLING SCAN

To Enable Scan - Press the "  " softkey. The display will indicate the radio is scanning by a " Z] " icon in the upper right corner.

To Disable Scan - Press the "  " softkey.

Note: Pressing the "Menu" softkey while scanning will also disable scan.

ADD/REMOVE CHANNEL FROM SCAN LIST

To Add a Channel - Press the "**Menu**" softkey, scroll down to "**Channel Parameter**" using the up/down softkeys and press the "**Select**" softkey.

Scroll down to "**Channel Scan**" and press the "**Select**" softkey.

Scroll up/down to desired channel and press the "**Select**" softkey. Scroll to "**Add to List**", "**1st Priority**" or "**2nd Priority**" and press the "**OK**" softkey.

Press the "**Exit**" softkey, and continue adding more channels to the scan list.

Once complete, press "**Exit**" twice to close scan edit list.


To Remove a Channel - Repeat the process and select "**Remove**".

HI/MID/LOW Power Selection *Note: H= High Power/ M=Medium Power/ L=Low Power*

Press the "**FI**" side button to cycle between HI/MID/LOW power settings.

LOCKING KEYPAD

Press the "  " softkey once to lock key pad.



Press the "  " softkey once more then press the "**Unlock**" softkey to unlock keypad.

(See Midland Help Files for more Detail)



1. Select a group and channel needed to program.

2. Programming a Channel (Analog Only)

- Select "**Menu**" softkey, scroll up/down to "**Channel Parameters**" and press the "**Select**" softkey
- Scroll up/down to "**Channel**" and press the "**Select**" softkey. Enter a 5-Digit password and press "**OK**".
Note: NIICD Password is "00000"
- Scroll up/down to desired channel and press the "**Select**" softkey.
- **Channel Mode:** Press "**Edit**" and scroll up/down to select "**Analog, Digital or Multi**" and press "**OK**".
- **RX Freq:** Press "**Edit**", then press "  " several times to clear and enter a new RX Freq and press "**OK**".
- **TX Freq:** Press "**Edit**", then press "  " several times to clear and enter a new TX Freq and press "**OK**".
- **TX Power:** Press "**Edit**" and scroll up/down to select "**Low, Medium, or High**" and press "**OK**".
Note: NIICD Default is Medium (2 Watts)
- **Channel Name:** Press "**Edit**", then press " " several times to clear and enter new name via the alphanumeric keypad and press "**OK**" when done.
- **TX Timeout:** Press "**Edit**" and scroll up/down to select "**No or Yes**" and press "**OK**".
Note: NIICD Default is set to "Yes", timer is set to 120 seconds.
- **RX Tone Type:** Press "**Edit**" and scroll up/down to select "**CCS or DCS**" and press "**OK**".
- **RX Tone:** Press "**Edit**" and scroll up/down to select desired tone from list and press "**OK**".
- **TX Tone Type:** Press "**Edit**" and scroll up/down to select "**CCS or DCS**" and press "**OK**".
- **TX Tone:** Press "**Edit**" and scroll up/down to select desired tone from list and press "**OK**".
- **Channel Spacing:** Press "**Edit**" and scroll up/down to select "**12.5Khz or 15Khz**" and press "**OK**".
Note: Narrowband is "12.5Khz", Wideband is "15Khz"
- **ANI Type:** Press "**Edit**" and scroll up/down to select "**None, 5-Tone, or DTMF**" and press "**OK**".
- **Selcall Type:** Press "**Edit**" and scroll up/down to select "**None, 2-Tone, or 5-Tone**" and press "**OK**".
- Once all parameters are entered, press the "**Exit**" key. Press "**Yes**" when display shows "**Save Changes Permanently?**".

NIICD Midland Radios ONLY.

MIDLAND SETTINGS AND OPTIONS

 
CHANGING ZONES

To change groups, press the "**Zone**" softkey. Enter the zone number via the key pad and press the "**OK**" softkey.

OR

Press the "**Zone**" softkey. Press the UP/Down keypad keys to desired zone and press the "**OK**" softkey.

ENABLING/DISABLING SCAN

To Enable Scan - Press the "  " softkey. The display will indicate the radio is scanning by a " Z] " icon in the upper right corner.

To Disable Scan - Press the "  " softkey.

Note: Pressing the "Menu" softkey while scanning will also disable scan.

ADD/REMOVE CHANNEL FROM SCAN LIST

To Add a Channel - Press the "**Menu**" softkey, scroll down to "**Channel Parameter**" using the up/down softkeys and press the "**Select**" softkey.

Scroll down to "**Channel Scan**" and press the "**Select**" softkey.

Scroll up/down to desired channel and press the "**Select**" softkey. Scroll to "**Add to List**", "**1st Priority**" or "**2nd Priority**" and press the "**OK**" softkey.

Press the "**Exit**" softkey, and continue adding more channels to the scan list.

Once complete, press "**Exit**" twice to close scan edit list.


To Remove a Channel - Repeat the process and select "**Remove**".

HI/MID/LOW Power Selection *Note: H= High Power/ M=Medium Power/ L=Low Power*

Press the "**FI**" side button to cycle between HI/MID/LOW power settings.

LOCKING KEYPAD

Press the "  " softkey once to lock key pad.

Press the "  " softkey once more then press the "**Unlock**" softkey to unlock keypad.

(See Midland Help Files for more Detail)