APPENDIX C

PART 572, SUBPART N (6-YEAR-OLD) DUMMY PERFORMANCE CALIBRATION TEST PROCEDURE

APPENDIX C

PART 572, SUBPART N DUMMY PERFORMANCE CALIBRATION TEST PROCEDURE

TABLE OF CONTENTS

PURPOSE A	AND APPLICATION	C-1
GENERAL F	REQUIREMENTS	
SECURITY		
GOOD HOU	SEKEEPING	
TEST SCHE	DULING AND MONITORING	
TEST DATA	DISPOSITION	
GOVERNME	ENT FURNISHED PROPERTY (GFP)	
11.1 11.2 11.3 11.4 11.5	TRANSDUCER REQUIREMENTSOTHER TRANSDUCER CONDITIONSTHORAX IMPACTOR PROBEKNEE IMPACTOR PROBEGENERAL TEST CONDITIONS	
CALIBRATIO	ON TEST EXECUTION	C-10
POST TEST	REQUIREMENTS	C-10
REPORTS		
14.1 14.2	APPARENT TEST FAILUREFINAL PERFORMANCE CALIBRATION REPORTS	C-10
C1 C2 C3 C4 C5 C6 C7 C8 C9	DUMMY DAMAGE CHECKLIST EXTERNAL MEASUREMENTS HEAD DROP TEST NECK FLEXION TEST NECK EXTENSION TEST THORAX IMPACT TEST TORSO FLEXION TEST LEFT KNEE IMPACT TEST RIGHT KNEE IMPACT TEST	C-13 C-15 C-22 C-25 C-27 C-32 C-37 C-40
	GENERAL F SECURITY GOOD HOU TEST SCHE TEST DATA GOVERNME CALIBRATIO PHOTOGRA DEFINITION PRETEST R 11.1 11.2 11.3 11.4 11.5 CALIBRATIO POST TEST REPORTS 14.1 14.2 DATA SHEE C1 C2 C3 C4 C5 C6 C7 C8	11.2 OTHER TRANSDUCER CONDITIONS

ILLUSTRATIONS

1C.	SIGN CONVENTION	C-8
2C.	EXTERNAL DIMENSIONS SPECIFICATIONS	
3C.	EXTERNAL DIMENSIONS TEST SETUP FRONT VIEW	
4C.	EXTERNAL DIMENSIONS TEST SETUP SIDE VIEW	
5C.	HEAD DROP TEST SET-UP SPECIFICATION	
6C.	NECK PENDULUM SPECIFICATIONS	
7C.	NECK FLEXION TEST SETUP SPECIFICATIONS	
8C.	NECK EXTENSION TEST SETUP SPECIFICATIONS	
9C.	THORAX IMPACT TEST SETUP SPECIFICATIONS	
10C.	THORAX HYSTERESIS	
11C.	TORSO FLEXION TEST SETUP SPECIFICATIONS	
12C.	KNEE IMPACT TEST SETUP SPECIFICATIONS	
	TABLES	
10	SIGN CONVENTION FOR HYBRID III TRANSDUCER OUTPUTS	C-8

1. PURPOSE AND APPLICATION

The purpose of this laboratory procedure is to provide dummy users (independent testing laboratories under contract with the Office of Vehicle Safety Compliance) with standard test procedures for performing receiving-inspection and performance calibration tests on the Part 572, Subpart N dummy so that repetitive and correlative test results can be obtained. The following tests have been developed to establish a uniform calibration procedure for all users as the means of verifying the performance of the dummy.

- A. EXTERNAL DIMENSIONS (drawing 127-0000 sheet 5 of 6, & PADI)
- B. HEAD DROP TEST (572.122)
- C. NECK FLEXION TEST (572.123(b)(1))
- D. NECK EXTENSION TEST 572.123(b)(2)
- E. THORAX IMPACT TEST ((572.124)
- F. TORSO FLEXION (572.125)
- G. KNEE IMPACT TESTS (572.126)

This laboratory procedure for the calibration of Part 572, Subpart N dummies must be used by National Highway Traffic Safety Administration (NHTSA) contract laboratories performing FMVSS 213 testing for the Office of Vehicle Safety Compliance (OVSC).

2. GENERAL REQUIREMENTS

The Code of Federal Regulations (49CFR), Parts 571 and 572, was amended to adopt the Hybrid III, 6-Year-Old Child Dummy as the means of determining a Child Restraint System's (CRS's) conformance to the performance requirements of FMVSS 213. Each Part 572, Subpart N dummy used in a compliance test must meet the specifications and performance criteria of Part 572.

The Part 572, Subpart N Hybrid III, 6-Year-Old Child Dummy consists of components and assemblies specified in the drawing and specifications package which is available from Reprographics Technologies, 9000 Virginia Manor Road, Beltsville, MD 20705,

3. SECURITY

All NHTSA Part 572, Subpart N test dummies delivered to the contract laboratory as Government Furnished Property (GFP) will be stored in a safe and secure area such as the dummy calibration laboratory. The contractor is financially responsible for any acts of theft and/or vandalism which occur during the storage of GFP. Any security problems shall be reported by telephone to the Industrial Property Manager (IPM), Office of Contracts and Procurement, within two working days after the incident. A letter containing specific details of the security problem will be sent to the IPM (with copy to the COTR) within 48 hours.

The contractor is responsible for maintaining the NHTSA test dummies in good working order, and shall protect and segregate the data that evolves from conducting Part 572, Subpart N dummy calibration tests before and after each CRS test.

No Information concerning the Part 572, Subpart N dummy calibration data shall be released to anyone except the COTR, unless specifically authorized by the COTR or the COTR's Branch or Division Chief.

NOTE: No Individuals, other than contractor personnel directly involved in the dummy calibration test program, shall be allowed to witness dummy calibration tests unless specifically authorized by the COTR.

4. GOOD HOUSEKEEPING

Contractors shall maintain the entire dummy calibration laboratory, test fixtures, and instrumentation in a neat, clean, and painted condition with test instruments arranged in an orderly manner consistent with good test laboratory housekeeping practices.

5. TEST SCHEDULING AND MONITORING

The Part 572, Subpart N dummies are being calibrated as test tools to be used in determining CRS compliance with the requirements of FMVSS 213. The schedule for these performance calibration tests must be correlated with that of the CRS tests. All testing shall be coordinated to allow monitoring by the COTR.

6. TEST DATA DISPOSITION

The contractor shall make all dummy calibration data available to the COTR for review and analysis as required. All calibration test data for each particular Part 572, Subpart N dummy will be sent to the COTR with each test report.

All backup data sheets, strip charts, recordings, plots, technicians notes, etc. shall be either sent to the COTR or destroyed at the conclusion of each delivery order, purchase order, etc.

7. GOVERNMENT FURNISHED PROPERTY (GFP)

Part 572, Subpart N test dummies will be furnished to the contract laboratory by the OVSC. The dummies shall be stored in an upright sitting position with the weight supported by the internal structure of the pelvis. The dummies head shall be held upright by using a strap around the chest or the base of the neck so that the neck is not supporting the weight of the dummy. These dummies shall be stored in a secured room that is kept between 55°F and 85°F. The contractor will check dummy components for damage after each crash test and complete a dummy damage checklist that will be included with the posttest dummy calibration. The COTR will be kept informed of the dummies condition in order that replacement parts can be provided.

8. CALIBRATION AND TEST INSTRUMENTATION

Before the contractor initiates the dummy performance calibration test program, a test instrumentation calibration system must be implemented and maintained in accordance with established calibration practices. The calibration system shall be set up and maintained as follows:

- A. Standards for calibrating the measuring and test equipment shall be stored and used under appropriate environmental conditions to assure their accuracy and stability.
- B. All measuring instruments and standards shall be calibrated by the contractor, or a commercial facility, against a higher order standard at periodic intervals not exceeding 6 months for instruments and 12 months for calibration standards. Records, showing the calibration traceability to the National Institute of Standards and Technology (NIST), shall be maintained for all measuring and test equipment.
- C. All measuring and test equipment and measuring standards shall be labeled with the following information:
 - (1) Date of calibration
 - (2) Date of next scheduled calibration
 - (3) Name of the technician who calibrated the equipment
- D. The contractor shall provide a written calibration procedure that includes, as a minimum, the following information for all measurement and test equipment:
 - (1) Type of equipment, manufacturer, model number, etc.

- (2) Measurement range
- (3) Accuracy
- (4) Calibration interval
- (5) Type of standard used to calibrate the equipment (calibration traceability of the standard must be evident)
- (6) The actual procedures and forms used to perform calibrations.
- E. The contractor shall keep records of calibrations for all test instrumentation in a manner that assures the maintenance of established calibration schedules. All such records shall be readily available for inspection when requested by the COTR. The calibration system will need the written acceptance of the COTR before testing begins.
- F. Test equipment shall receive a calibration check immediately prior to and after each test. This check shall be recorded by the test technician(s) and submitted with the final report.

9. RESERVED

10. **DEFINITIONS**

PADI: Procedures for Assembly, Disassembly, and Inspection

11. PRETEST REQUIREMENTS

11.1 TRANSDUCER REQUIREMENTS

The contractor shall provide and install the following instrumentation to the GFP dummies (excluding the chest deflection transducer).

A. HEAD – The head accelerometers shall have dimensions, response characteristics and sensitive mass locations specified in drawing SA572-S4 and be mounted in the head as shown in drawing 127-0000 sheet 3. (572.127(c))

Three accelerometers shall be mounted in the head cavity to measure orthogonal accelerations (Ax, Ay, Az) at the center of gravity (CG) of the head assembly.

- B. NECK The upper neck force transducer shall have the dimensions, response characteristics, and sensitive axis locations specified in drawing SA572-S11 and shall be mounted in the head neck assembly as shown in drawing 127-0000, sheet 3. (572.127(d))
- C. CHEST The chest accelerometers shall have the dimensions, response characteristics, and sensitive mass locations specified in drawing SA572-S4 and be mounted in the torso assembly in triaxial configuration at T4 as shown in drawing 127-0000 sheet 3. The chest accelerometers are not required for dummy calibration testing but are required for FMVSS 213 CRS testing. (572.126(e))

The chest deflection transducer shall have the dimensions and response characteristics specified in drawing SA572-S50 and be mounted to the upper torso assembly as shown in drawing 127-0000 sheet 3. (572.127(f))

D. TEST FIXTURE – The neck pendulum, thorax and knee probe accelerometers shall have the dimensions and characteristics of drawing SA572-S4.

11.2 OTHER TRANSDUCER CONDITIONS

- A. TRANSDUCER MOUNTS The mountings for sensing devices shall have no resonance frequency less than 3 times the frequency range of the applicable channel class. (572.127(m))
- B. TRANSDUCER SIGN CONVENTION The sign convention for outputs of transducers mounted within the dummy that measure head and chest accelerations, chest deflection and femur loads are located in Figure 1C and Table 1C. For other transducers see SAE J1733DEC94. (572.127(I))
- C. TRANSDUCER OUTPUTS and FILTERING The outputs of acceleration and force-sensing devices installed in the dummy and in the test apparatus specified by this part are recorded with individual data channels. Each data channel will be comprised of a sensor, signal conditioner, data acquisition device, and all interconnecting cables, and must conform to the requirements of SAE Recommended Practice J211/1 MAR95, "Instrumentation for Impact Test," with channel classes as follows: (572.127(k))

 Head acceleration Neck force Neck pendulum acceleration Neck moment transducers Thorax and thorax pendulum 	Class 1000 (572.127(k)(1)) Class 1000 (572.127(k)(2)(i)) Class 180 (572.127(k)(2)(iii)) Class 600 (572.127(k)(2)(ii)) Class 180 (572.127(k)(3)(ii))
acceleration (6) Sternum deflection (7) Knee pendulum acceleration (8) Femur force (9) Torso flexion	Class 600 (572.127(k)(3)(iii)) Class 600 Class 600 (572.127(k)(6)) Class 60

All filter classes should be of the "phaseless" type to be compatible with the "time" dependent test parameters.

11.3 THORAX IMPACTOR PROBE (572.127(a))

- A. The test probe for thoracic impacts shall be of rigid metallic construction, concentric about its longitudinal axis.
- B. It shall have a mass of 2.86 ± 0.02 kg (6.3 ± 0.05 lbs). 1/3 of the weight of the suspension cables and any attachments to the impact probe must be included in the calculation of mass, and such components may not exceed 5 percent of the total weight of the test probe.
- C. It shall have a minimum mass moment of inertia of 160 kg-cm² (0.141 lbs-in-sec²) in yaw and pitch about the center of gravity.

- D. The impacting end of the probe is perpendicular to and concentric with the longitudinal axis. It must have a flat, continuous, and non-deformable face with diameter of 101.6 \pm 0.25 mm (4.00 \pm 0.01 in) and a edge radius of 7.6-12.7 mm (0.3-0.5 in).
- E. The impactor is a cylinder with a diameter of 101-103 mm (4.0-4.1 in) and it is at least 12.5 mm (0.5 in) long.
- E. The probe's end opposite to the impact face must have provisions for mounting of an accelerometer with its sensitive axis collinear with the longitudinal axis of the probe.
- F. The impact probe shall have a free air resonant frequency of not less than 1000 Hz in the direction of the longitudinal direction of the impactor.

11.4 KNEE IMPACTOR PROBE (572.127(b))

- A. The test probe for knee impacts shall be of rigid metallic construction, concentric in shape and symmetric about is longitudinal axis.
- B. It shall have a mass of 0.82 ± 0.02 kg (1.8 ± 0.05 lbs). 1/3 of the weight of the suspension cables and any attachments to the impact probe must be included in the calculation of mass, and such components may not exceed 5 percent of the total weight of the test probe.
- C. It shall have a minimum mass moment of inertia of 34 kg-cm² (0.03 lbs-in-sec²) in yaw and pitch about the center of gravity.
- D. The impacting end of the probe is perpendicular to and concentric with the longitudinal axis. It must have a flat, continuous, and non-deformable face with diameter of 76.2 ± 0.2 mm (3.00 ± 0.01 in) and a maximum edge radius of 7.6-12.7 mm (0.3-0.5 in).
- E. The impactor is a cylinder with a diameter of 76-77 mm (3.0-3.1 in) and it is at least 12.5 mm (0.5 in) long.
- F. The probe's end opposite to the impact face must have provisions for mounting of an accelerometer with its sensitive axis collinear with the longitudinal axis of the probe.
- G. The impact probe shall have a free air resonant frequency of not less than 1000 Hz in the direction of the longitudinal direction of the impactor.

SIGN CONVENTION FOR PART 572 TEST DUMMIES

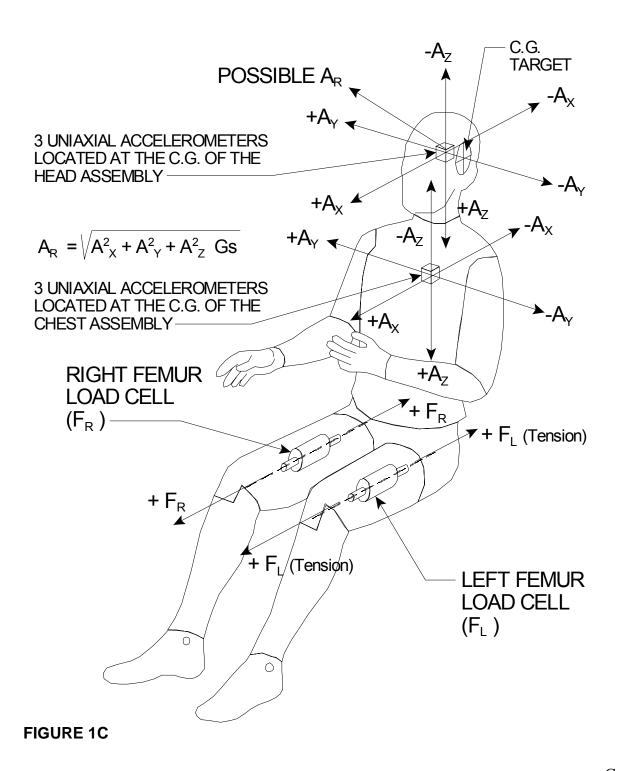


TABLE 1C

SIGN CONVENTION FOR HYBRID III TRANSDUCER OUTPUTS		
BODY SEGMENT — MEASURED FORCE POSITIVE OUTPUT DIRECTION		
NECK FX SHEAR FY SHEAR FZ AXIAL	HEAD REARWARD OR CHEST FORWARD HEAD LEFTWARD, CHEST RIGHTWARD HEAD UPWARD, CHEST DOWNWARD	
MX MOMENT (ROLL) MY MOMENT (PITCH) MZ MOMENT (YAW)	LEFT EAR TOWARD LEFT SHOULDER CHIN TOWARD STERNUM CHIN TOWARD LEFT SHOULDER	
FEMUR FX SHEAR FY SHEAR FZ AXIAL	KNEE UPWARD, UPPER FEMUR DOWNWARD KNEE RIGHTWARD, UPPER FEMUR LEFTWARD KNEE FORWARD (TENSION), PELVIS REARWARD	
MX MOMENT (ROLL) MY MOMENT (PITCH) MZ MOMENT (YAW)	KNEE LEFTWARD, HOLD UPPER FEMUR IN PLACE KNEE UPWARD, HOLD UPPER FEMUR IN PLACE KNEE ROTATED CCW WHEN FACING FRONT OF DUMMY	
KNEE CLEVIS - FZ AXIAL	TIBIA DOWNWARD (TENSION), FEMUR UPWARD	
UPPER TIBIA MX MOMENT MY MOMENT	ANKLE LEFTWARD, HOLD KNEE IN PLACE ANKLE FORWARD, BOTTOM OF KNEE CLEVIS REARWARD	
LOWER TIBIA FX SHEAR FY SHEAR FZ AXIAL	ANKLE FORWARD, KNEE REARWARD ANKLE RIGHTWARD, KNEE LEFTWARD ANKLE DOWNWARD (TENSION), KNEE UPWARD	
MX MOMENT MY MOMENT	ANKLE LEFTWARD, HOLD KNEE IN PLACE ANKLE FORWARD, BOTTOM OF KNEE CLEVIS REARWARD	
CHEST DISPLACEMENT	CHEST COMPRESSED - NEGATIVE	
KNEE SHEAR DISPLACEMENT	PUSH ON FRONT OF TIBIA - NEGATIVE	

NOTE: DIRECTIONS ARE DEFINED IN RELATION TO A SEATED DUMMY

11.5 GENERAL TEST CONDITIONS

- A. Surfaces of dummy components are not painted unless otherwise specified. (572.127(p))
- B. Dummy performance tests of the same component, segment, assembly, or fully assembled dummy are separated in time by a period of not less than 30 minutes unless otherwise specified. (572.127(o))
- C. Except for neck assembly and thorax assembly testing, the dummy performance tests are conducted at any temperature from 18.9°C (66°F) to 25.6°C (78°F) and at any relative humidity from 10% to 70% after exposure of the dummy to these conditions for a period of not less than 4 hours. For the neck assembly and thorax assembly, the temperature range is 20.6°C (69°F) to 22.2°C (72°F)
- D. Dummy limb joints are set at 1 G, barely restraining the weight of the limb when it is extended horizontally. The force required to move a limb segment does not exceed 2 Gs throughout the range of limb motion. (572.127(n))
- E. Dummies will be clothed for the thorax calibration tests with a cotton stretch above-the-elbow sleeved shirt and above-the-knee pants. (572.124(c)(2))

12. CALIBRATION TEST EXECUTION

Complete the Data Sheets in section 15.

13. POST TEST REQUIREMENTS

The contractor shall verify all instrumentation and check data sheets and photographs. Make sure data is recorded in all data blocks on every performance calibration test data sheet.

14. REPORTS

14.1 APPARENT NONCONFORMANCE

During the post test calibration verification, any indication of apparent nonconformance to the requirements of Regulation P572 shall be communicated by telephone to the COTR within 24 hours with written notification mailed within 48 hours (Saturdays and Sundays excluded). Written notification shall be submitted with a copy of the particular test data sheet(s) and preliminary data plot(s).

In the event of an apparent nonconformance, a post test calibration check of some critically sensitive test equipment and instrumentation may be required for verification of accuracy. The necessity for the calibration shall be at the COTR's discretion and shall be performed without additional costs to the OVSC.

14.2 FINAL PERFORMANCE CALIBRATION REPORTS

14.2.1 COPIES

A report containing the pre-test calibration and post test calibration verification data for each Part 572, Subpart N dummy used in the CRS compliance test shall be submitted with FMVSS 213 final test reports.

Contractors are required to PROOF READ all Final Test Reports before submittal to the COTR. The OVSC will not act as a report quality control office for contractors. Reports containing a significant number of errors will be returned to the contractor for correction, and a "hold" will be placed on invoice payment for the particular test.

14.2.2 REQUIREMENTS

Performance calibration report Table of Contents shall include the following:

- A. Section 1 Purpose of Calibration Test
- B. Section 2 Calibration Data Summary
- C. Section 3 Test Data
- D. Section 4 Test Equipment List and Calibration Information
- E. Section 5 Photographs (if applicable)

The test data for each dummy will be presented in separate sections. Each section shall contain a title page, test results summary and the test data. The title page shall include the dummy's serial number and he manufacturer's name. It will also indicate whether the calibration data is pre or post test. The test results sheets will provide a summary of each test and describe any damage, failures and/or corrective action taken. The test data shall include the pass/fail data sheets, the time histories for each data channel used to determine the pass or fail status, and instrumentation calibration data sheets.

14.2.3 FIRST PAGE

FRONT COVER

A heavy paperback cover (or transparency) shall be provided for the protection of the final report. The information required on the cover is as follows:

A. Final Report Title And Subtitle such as

DUMMY PERFORMANCE CALIBRATION IN SUPPORT OF CHILD RESTRAINT SYSTEM TESTING FMVSS No. 213

B. Contractor's Name and Address such as



ABC TESTING LABORATORIES, INC. 405 Main Street Detroit, Michigan 48070

NOTE: DOT SYMBOL WILL BE PLACED BETWEEN ITEMS B AND C

- C. Date of Final Performance Calibration Report completion
- D. The sponsoring agency's name and address as follows

U. S. DEPARTMENT OF TRANSPORTATION
National Highway Traffic Safety Administration
Enforcement
Office of Vehicle Safety Compliance
400 Seventh Street, SW
Room 6111 (NVS-222)
Washington, DC 20590

15. Data Sheets

DATA SHEET C1 DUMMY DAMAGE CHECKLIST

Dummy Serial Number	Test Date
Technician	
This check sheet is completed as part of	the post test calibration verification.
Perform general cleaning.	

D Ita	lasas sat fam	O-marks	D	014
Dummy Item	Inspect for	Comments	Damaged	OK
Outer skin	Gashes, rips, cracks			
Head	Ballast secure			
	General appearance			
Neck	Broken or cracked			
	rubber			
	Upper neck bracket			
	firmly attached to			
	the lower neck			
	bracket			
	Looseness at the			
	condyle joint			
	Nodding blocks			
	cracked or out of			
	position			
Spine	Broken or cracks in			
	rubber.			
Ribs	Broken or bent ribs			
	Broken or bent rib			
	supports			
	Damping material			
	separated or			
	cracked			
	Rubber bumpers in			
	place			
Chest	Bent shaft			
Displacement				
Assembly				
	Slider arm riding in			
	track			
Abdomen	Proper positioning			
Transducer	Torn cables			
leads	TOTTI GUDICO			
icaus				l .

Dummy Item	Inspect for	Comments	Damaged	OK
Accelerometer	Head mounting			
Mountings	secure			
	Chest mounting			
	secure			
Knees	Skin condition			
	Insert (do not			
	remove)			
	Casting			
Limbs	Normal movement			
	and adjustment			
Knee Sliders	Wires intact			
	Rubber returned to			
	"at rest" position			
Pelvis	Broken			
Other	Brokeri			
If upon visu	al examination, damag	e is apparent in any of these areas,	the appropr	iate
		is to be consulted for a decision or		
replacemen			•	
	eplacement approved I	hv:		
Repail of R	chiacement approved i	OV.		
Repail of R	еріасеттеті аррголесті	oy.		
Repail of R	еріасетіеті арргочест	oy.		
керап от к	еріасетіені арргочест	oy.		
	еріасетіені арргочест			
Signature	еріасеттеті арргочест			
	еріасеттеті арргочест			
Signature		Date		
Signature	e repair or replacemen	Date		
Signature		Date		
Signature Describe th	e repair or replacemen	Date		
Signature	e repair or replacemen	Date		

Date

Signature

DATA SHEET C2 EXTERNAL MEASUREMENTS

Dumm	ny Serial Number Test Date
Techn	ician
	test calibration at test calibration verification
1. 2. 3.	Remove the dummy's chest jacket and the abdominal insert. Seat the dummy on a flat, rigid, smooth, clean, dry, horizontal surface as shown in Figure 3C and 4C. The seating surface is at least 215.9 mm (8.5 in) wide and 330.2 mm (13 in) in depth with a vertical section at least 215.9 mm (8.5 in) wide and 635 mm (25 in) high attached to the rear of the seating fixture. The dummy's midsagittal plane is vertical and centered on the test surface. Remove the four $\frac{1}{4}$ -20 x 7/8 SHCS that attach the lumbar spine bracket to the pelvis. Torque the spine cable to $0.22 \pm .02$ NM (2.0 ± 0.2 in-lbs).
	NOTE: At this point the thorax is to be inspected for damage. The thorax displacement transducer may be removed for calibration if required (pretest calibration only). Extreme caution to be used so as not to damage the instrumentation cables.
4. 5. 6.	Reassemble the lumbar spine bracket to the pelvis. Secure the dummy to the test fixture so that the rear surfaces of the upper thorax and the buttock are tangent to the rear vertical surface of the fixture. (or as near tangent as possible). The dummy's midsagittal plane should be vertical. Position the dummy's H-point so it is 68.6 ± 5.1 mm $(2.7 \pm 0.2$ in) above the horizontal seating surface and 94.0 ± 5.1 mm $(3.7 \pm 0.2$ in) forward of the rear
7.	vertical surface of the fixture. The H-point is located 34.5 mm (1.36 in) forward and 48.7 mm (1.92 in) downward from the center pelvic angle reference hole. Extend the dummy's neck so that the plane perpendicular to the skull to skullcap interface is level both fore-and-aft and side-to-side, within 0.5 degrees. (The vertical mating surface between the skull and skull cap will be vertical.) The rear surface of the skullcap should be 20.3 ± 2.5 mm (0.8 \pm 0.1 in) from the vertical surface of the test fixture. A strap or bungee cord may be placed around the forehead of the dummy to stabilize the head in this position.
8.	Position the upper and lower legs parallel to the midsagittal plane so the knee and ankle pivots centerlines are parallel, forming a 90° angle between the tibia and femur.
9.	Position the feet parallel to the dummy's midsagittal plane with the bottoms
10.	horizontal and parallel to the seating surface. Position the upper arms downward vertically so the centerlines of the shoulder yoke and elbow pivots are parallel.

11. Position the lower arms horizon are parallel.	ntally so the centerline of the elbow and wrist pivot
•	following table, except for dimension Y and Z
fixture. The head need not be	chest jacket. Reposition the dummy on the test level as previously specified. and record the dimensions Y, Z, as specified in
Signature	 Date

EXTERNAL DIMENSIONS

HYBRID III, PART 572, SUBPART N EXTERNAL DIMENSIONS				
DIMENSION	DESCRIPTION	DETAILS	ASSEMBLY DIMENSION (mm)	ACTUAL MEASUREMENT
Α	TOTAL SITTING HEIGHT	Seat surface to highest point on top of the head.	622.3 - 647.7	
В	SHOULDER PIVOT HEIGHT	Centerline of shoulder pivot bolt to the seat surface.	348.0 - 363.2	
С	H-POINT HEIGHT	Reference	63.5 - 73.7	
D	H-POINT LOCATION FROM BACKLINE	Reference	88.9 - 99.1	
E	SHOULDER PIVOT FROM BACKLINE	Center of the shoulder clevis to the rear vertical surface of the fixture.	53.3 - 63.5	
F	THIGH CLEARANCE	Measured at the highest point on the upper femur segment.	88.9 - 104.1	
G	BACK OF ELBOW TO WRIST PIVOT	back of the elbow flesh to the wrist pivot in line with the elbow and wrist pivots	182.9 - 198.1	
Н	HEAD BACK TO BACKLINE	Back of Skull cap skin to seat rear vertical surface (Reference)	17.8 - 22.8	
I	SHOULDER TO- ELBOW LENGTH	Measure from the highest point on top of the broad upper surface of clavicle link below the collar ot the lowest part of the flesh of the elbow in line with the elbow pivot bolt.	215.9 - 231.1	
J	ELBOW REST HEIGHT	Measure from the flesh below the elbow pivot bolt to the seat surface.	157.4 - 177.8	
К	BUTTOCK TO KNEE LENGTH	The forward most part of the knee flesh to the rear vertical surface of the fixture.	370.8 - 391.2	
L	POPLITEAL HEIGHT	Seat surface to the horizontal plane at the bottom of the feet.	269.2 - 289.6	
М	KNEE PIVOT HEIGHT	Centerline of knee pivot bolt to the horizontal plane of the bottom of the feet.	307.4 - 322.6	

HYBRID III, SI	UBPART N EXTERNAL DIMENS	SIONS, continued		
DIMENSION	DESCRIPTION	DETAILS	ASSEMBLY DIMENSION (mm)	ACTUAL MEASUREMENT
N	BUTTOCK POPLITEAL LENGTH	The rearmost surface of the lower leg to the same point on the rear surface of the buttocks used for dim. "K".	320.0 - 340.4	
0	CHEST DEPTH WITHOUT JACKET	Measured 330.2 ± 5.1 mm above seat surface	129.6 - 144.8	
Р	FOOT LENGTH	Tip of toe to rear of heal	170.2 - 185.4	
Q	STATURE	(THEORETICAL) (Q = A - C - D + R + M)	1099.9 - 1181.1	N/A
R	BUTTOCK TO KNEE PIVOT LENGTH	The rear surface of the buttocks to the knee pivot bolt	342.9 - 363.3	
S	HEAD BREADTH	The widest part of the head	137.1 - 147.3	
Т	HEAD DEPTH	Back of the head to the forehead	167.6 - 177.8	
U	HIP BREADTH	The widest part of the hips	208.3 - 223.5	
V	SHOULDER BREADTH	Outside shoulder edges, in line with the shoulder pivot bolts	259.1 - 274.3	
W	FOOT BREADTH	The widest part of the foot	62.3 - 77.5	
Х	HEAD CIRCUMFERENCE	Measured at the point as in dim. "T"	510.5 - 530.9	
Υ	CHEST CIRCUMFERENCE (WITH CHEST JACKET)	Measured 3330.2 ± 5.1 mm above seat surface	596.9 - 622.3	
Z	WAIST CIRCUMFERENCE (with chest jacket and abdominal insert)	Measured 158.8 ± 5.1 mm above seat surface	558.8 - 584.2	
AA	REFERENCE LOCATION FOR MEASUREMENT OF CHEST CIRCUMFERENCE	Reference	325.1 - 335.3	
ВВ	REFERENCE LOCATION FOR MEASUREMENT OF WAIST CIRCUMFERENCE	Reference	153.7 - 163.9	

EXTERNAL DIMENSION SPECIFICATIONS

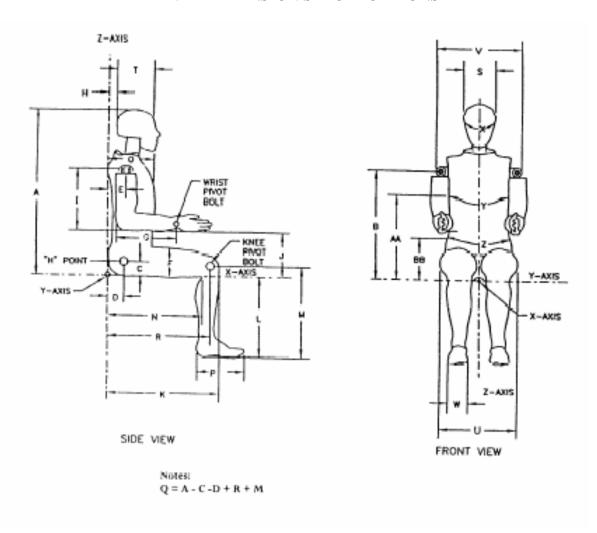


FIGURE 2C

EXTERNAL DIMENSIONS TEST SETUP


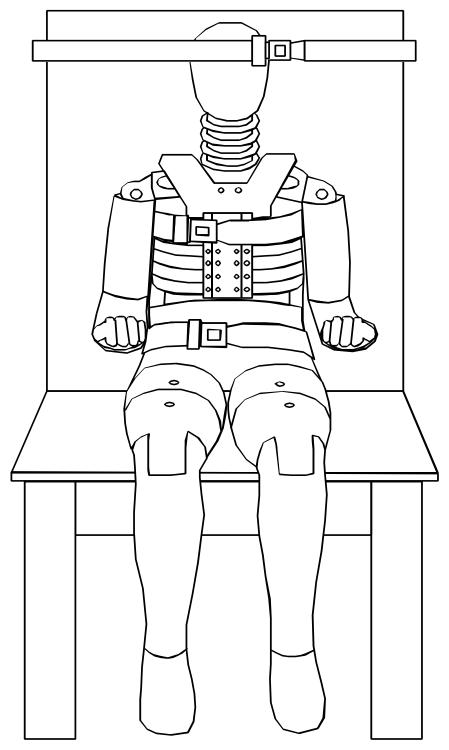


FIGURE 3C

EXTERNAL DIMENSIONS TEST SETUP

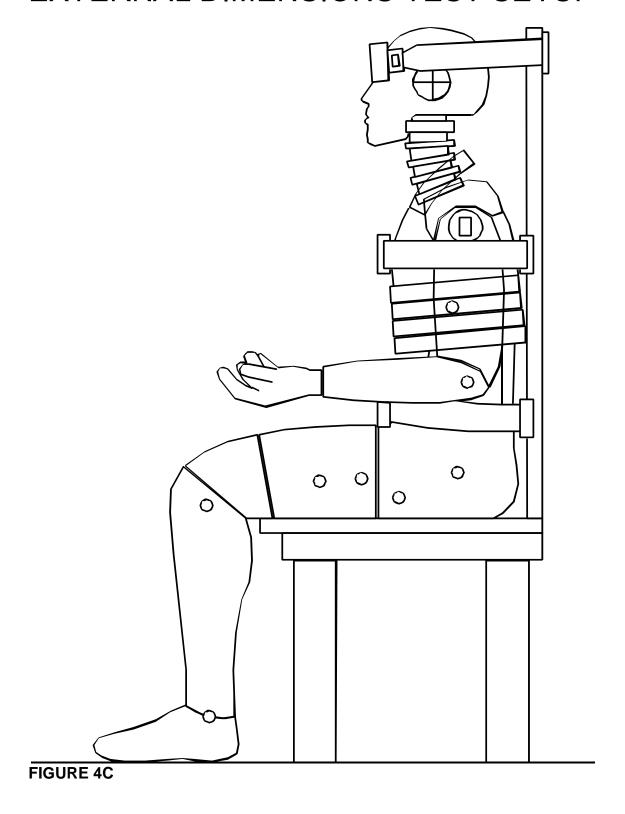

DATA SHEET C3 HEAD DROP TEST (572.122)

Dumm	ny Serial Number lest Date
Techn	iician
	test calibration st test calibration verification
Test a	ttempt no (when successive head drops are necessary)
1. 2.	It has been at least 2 hours since the last head drop. (572.122(c)(5)) N/A, ONLY one head drop performed The head assembly consists of the complete head (127-1000), a six-axis neck transducer (SA572-S11) or its structural replacement (78051-383X), a head to neck pivot pin (78051-339), and three (3) accelerometers (SA572-S4).
3. 4. 5.	(572.122(a)) Torque the skull cap screws (10-32 x 1/2 SHCS) to 10.2 Nm. Accelerometers and their respective mounts are smooth and clean. The head accelerometer mounting plate screws ((10-24 x 3/8 SHCS) are torqued
6. 7.	to 9.0 Nm. The data acquisition system, including transducers, conforms to the requirements of SAE Recommended Practice J211/1 MAR95. (572.127(k)) The head assembly soaked at a temperature between 18.9°C (66°F) and 25.6°C (78°F) and at a relative humidity from 10% to 70% for a period of at least four (4) hours prior to a test. (572.122(c)(1)) Record the maximum temperature
8.	Record the minimum temperature Record the maximum humidity Record the minimum humidity Visually inspect the head skin for cracks, cuts, abrasions, etc. Repair or replace the head skin if the damaged area is more than superficial. Note: If the damage resulted from the vehicle crash test in which the dummy was an occupant, the damaged area is to be documented with photography and the post test calibration verification testing completed before any replacement or repairs are made.
9.	Clean the impact surface of the skin and the impact surface of the fixture with isopropyl alcohol, trichloroethane or equivalent prior to the test. (572.122(c)(2))

Signature		Date	
17.	Plots of the x, y, z, and resultant accele	eration data follow this sheet.	
	Lateral acceleration	y-axis acceleration ≤ 15 g	
		resultant acceleration	
	Oscillations after the main pulse	Less than 10% of the peak	
	Resultant versus time history curve	245 g ≤ x ≤ 500 g	
	Peak resultant acceleration	$245 \text{ g} \le x \le 300 \text{ g}$	rtoourt
ĺ	Parameter	Specification	Result
16.	surface. (572.122(b) & (572.122(c)(4)) Complete the following table using cha	nnel class 1000 data. (572.122(l	b)):
	0.04 inches) by a means that ensures a	•	
15.	Drop the head assembly from a height	of 376.0 ± 1.0 mm (14.8 inches	±
	Record length		
	Record thickness Record width		
	610 mm (24 inches) square. (572.122(c)(4))	
14.	The impact surface is a flat horizontal s	. ,	ick and
13.	The impact surface is rigidly supported	. (572.122(c)(4))	
	Record actual micro finish		
	203.2x10 ⁻⁶ mm (8 micro inches) to 203 (572.122(c)(4))	Z.UX IU IIIIII (60 MICTO INCNES) (KIVIO).
12.	The impact surface is clean and dry an		
40	Record the left side distance		. (
	Record the right side distance		
	is shown in Figure 5C. (572.122(c)(3))	a.epaet earlace. 7. typical t	.551 55145
11.	The 1.57 mm (0.062 inch) diameter hole head are equidistance within 2 mm from		
	cables are to be kept as lightween the test results.	ght as possible to minimize their	effect on
	NOTE: The masses of the susp		
	Record the actual distance		
	(572.122(c)(3))		
10.	Suspend and orient the head assembly on the forehead is $376.0 \pm 1.0 \text{ mm}$ (14.		

HEAD DROP TEST SET-UP SPECIFICATIONS

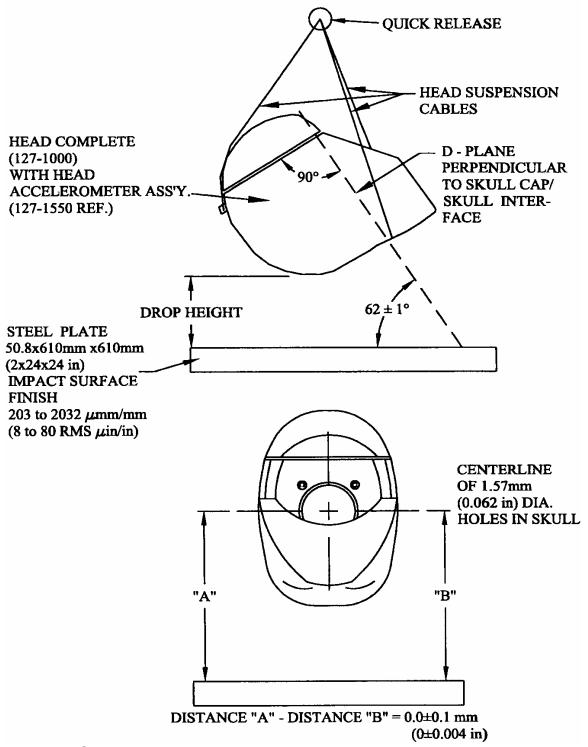


FIGURE 5C

DATA SHEET C4 NECK FLEXION TEST (572.123)

Dumn	ny Serial Number Test Date
Techr	nician
	etest calibration st test calibration verification
Test a	attempt no (when successive flexion tests are necessary)
1. 2.	It has been at least 30 minutes since the last neck test. (572.127(o)) N/A, ONLY one flexion test performed The components required for the neck tests include the head assembly (127-1000), neck (127-1015), pivot pin (78051-339), bib simulator (TE127-1025), neck bracket assembly (127-8221), six axis neck transducer (SA572-S11), neck mounting adaptor (TE-2208-001) and three accelerometers (SA572-S4) installed in the head assembly as specified in S572.122. Data from the accelerometers
3.	are not required. (572.123(b)) The assembly soaked at a temperature between 20.6°C (69°F) and 22.2°C (72°F) and at a relative humidity from 10% to 70% for a period of at least four (4) hours prior to a test. (572.123(c)(1)) Record the maximum temperature Record the minimum temperature Record the maximum humidity
4.	Record the minimum humidity Visually inspect neck assembly for cracks, cuts and separation of the rubber from the metal segments. Note: If the damage resulted from the vehicle crash test in which the dummy was an occupant, the damaged area is to be documented with photography and the post test calibration verification testing completed before any replacement or repairs are made. Record findings and actions:
5.	Inspect the nodding blocks (127-1020, 127-1021) for splits or deformation. Inspect the Neck Cable (127-1016) for deformation. Inspect the mounting plate insert (910420-048) and the nylon shoulder bushing (9001373) and replace if they are torn or worn. When replacement is necessary, ONLY replace during pretest calibration. Record findings and actions:

(2.0 ± 0.2 7. The data a of SAE Reg8. The test finction (572.123) 9. The head in the head in the head in longituding was adjusted to the second se	Torque the jam nut (9000341) on the neck cable (127-1016) to 0.23 ± 0.02 Nm (2.0 ± 0.2 in-lb). (572.123(c)(2) The data acquisition system, including transducers, conforms to the requirements of SAE Recommended Practice J211/1 MAR95. (572.127(k)) The test fixture pendulum conforms to the specifications in Figure 6C. (572.123(c)(3)) The head-neck assembly is mounted on the pendulum so the midsagittal plane of the head is vertical and coincides with the plane of motion of the pendulum longitudinal centerline as shown in Figure 7C for the flexion test. (572.123(c)(3)) With the pendulum resting against the honeycomb material, the neck bracket was adjusted until the longitudinal centerline of the pendulum was perpendicular \pm 1 degree to plane "D" on the dummy's head. Release the pendulum and allow it to fall freely from a height to achieve an impact speed of 4.83 m/s to 5.07 m/s as measured at the center of the pendulum accelerometer. (572.123(c)(4))		
		sults (572.123(b)(1) & (572.123(c)(4)(i & ii)	
Parameter	ion restrict	Specification	Result
Pendulum impac	t speed	4.83 m/s ≤ speed ≤ 5.07 m/s	rtoodit
Pendulum	@ 10ms	$1.2 \text{ m/s} \le \Delta V \le 1.6 \text{ m/s}$	
ΔV with respect	@ 20 ms	$2.4 \text{ m/s} \le \Delta V \le 3.4 \text{ m/s}$	
to impact speed	@30ms	$3.8 \text{ m/s} \le \Delta V \le 5.4 \text{ m/s}$	
Plane D Rotation	1	Peak moment* 27 Nm \leq moment \leq 33 Nm during the following rotation range $74^{\circ} \leq$ angle $\leq 92^{\circ}$	Nm @ degrees
Positive Moment (Flexion)	Decay**	Time to decay to 5 Nm 103 ms ≤ time ≤ 123 ms	
*Moment about the occipital condyle = M _y – (0.01778 m x F _x) (572.123(b)(1)(iii)) My = Moment in Nm measured by the transducer Fx = Force, in N measured by the transducer **Time zero is defined as the time of initial contact between the pendulum striker plate and the honeycomb material. (572.123(b)(3)			
Signature		Date	

DATA SHEET C5 NECK EXTENSION TEST (572.123)

Dumn	ny Serial Number Test Date
Techr	iician
	test calibration st test calibration verification
Test a	ttempt no (when successive extension tests are necessary)
1. 2.	It has been at least 30 minutes since the last neck test. (572.127(o)) N/A, ONLY one extension test performed The components required for the neck tests include the head assembly (127-1000), neck (127-1015), pivot pin (78051-339), bib simulator (TE127-1025), neck bracket assembly (127-8221), six axis neck transducer (SA572-S11), neck mounting adaptor (TE-2208-001) and three accelerometers (SA572-S4) installed in the head assembly as specified in S572.122. Data from the accelerometers
3.	are not required. (572.123(b)) The assembly soaked at a temperature between 20.6°C (69°F) and 22.2°C (72°F) and at a relative humidity from 10% to 70% for a period of at least four (4) hours prior to a test. (572.123(c)(1)) Record the maximum temperature Record the minimum temperature Record the maximum humidity
4.	Record the minimum humidity Visually inspect neck assembly for cracks, cuts and separation of the rubber from the metal segments. Note: If the damage resulted from the vehicle crash test in which the dummy was an occupant, the damaged area is to be documented with photography and the post test calibration verification testing completed before any replacement or repairs are made. Record findings and actions:
5.	Inspect the nodding blocks (127-1020, 127-1021) for splits or deformation. Inspect the Neck Cable (127-1016) for deformation. Inspect the mounting plate insert (910420-048) and the nylon shoulder bushing (9001373) and replace if they are torn or worn. When replacement is necessary, ONLY replace during pre test calibration. Record findings and actions:

6,			000341) on the neck cable (127-1016) to 0.23	± 0.02 Nm
7	$(2.0 \pm 0.2 \text{ in-lb})$. (572.123(c)(2)			
7.			ystem, including transducers, conforms to the d Practice J211/1 MAR95. (572.127(k))	requirements
8.			um conforms to the specifications in Figure 60	·
0.	(572.123	•	an comornia to the openinations in rigare of	J.
9.			bly is mounted on the pendulum so the midsa	gittal plane of
			d coincides with the plane of motion of the per	ndulum
	_		as shown in Figure 8C for the extension test.	
4.0	(572.123	` , ` , ,		
10.			sting against the honeycomb material, the nec	
			longitudinal centerline of the pendulum was portion on the dummy's head.	erpendiculai
11.			and allow it to fall freely from a height to achi	eve an
			m/s to 4.42 m/s as measured at the center of t	
		meter. (572.1		·
12.	Complet	e the following	g table:	
	Nia ala Esa		2	
Doron		tension lest F	Results (572.123(b)(2) & (572.123(c)(4)(i & ii)	Result
Paran	ulum impa	et spood	Specification	Result
Pend	•	@ 10ms	4.18 m/s ≤ speed ≤ 4.42 m/s	
ΔV wi		@ 20 ms	$1.0 \text{ m/s} \le \Delta V \le 1.4 \text{ m/s}$	
respe		@30ms	$2.2 \text{ m/s} \le \Delta V \le 3.0 \text{ m/s}$ $3.2 \text{ m/s} \le \Delta V \le 4.2 \text{ m/s}$	
•	t speed	@30111S	$3.2 \text{ III/S} \leq \Delta V \leq 4.2 \text{ III/S}$	
	D Rotatio	n	Peak moment*	Nm @
			-24 Nm ≤ moment ≤ -19 Nm during the	degrees
			following rotation range 85° ≤ angle ≤ 103°	
Negat	tive Mome	ent Decay**	Time to decay to -5 Nm	
(Extension)			123 ms ≤ time ≤ 147 ms	
	*Momen	t about the oc	cipital condyle = $M_y - (0.01778 \text{ m x } F_x) (572.1)$	23(b)(2)(iii)
		•	in Nm measured by the transducer	
		•	N measured by the transducer	
**Time zero is defined as the time of initial contact between the pendulum striker			dulum striker	
	plate a	na the noneyo	comb material. (572.123(b)(3)	
14	Plots of	acceleration v	velocity, y-axis moment, and x-axis force and y	/-axis
—''			ipital condyle follow this sheet.	, axio
			, , , , , , , , , , , , , , , , , , , ,	
Signa	ture		Date	

PENDULUM SPECIFICATIONS

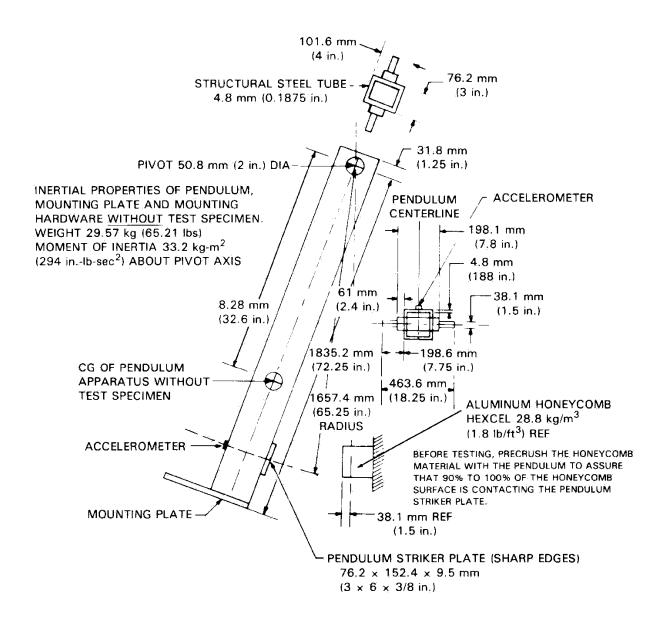


FIGURE 6C

NECK FLEXION TEST SET-UP SPECIFICATIONS

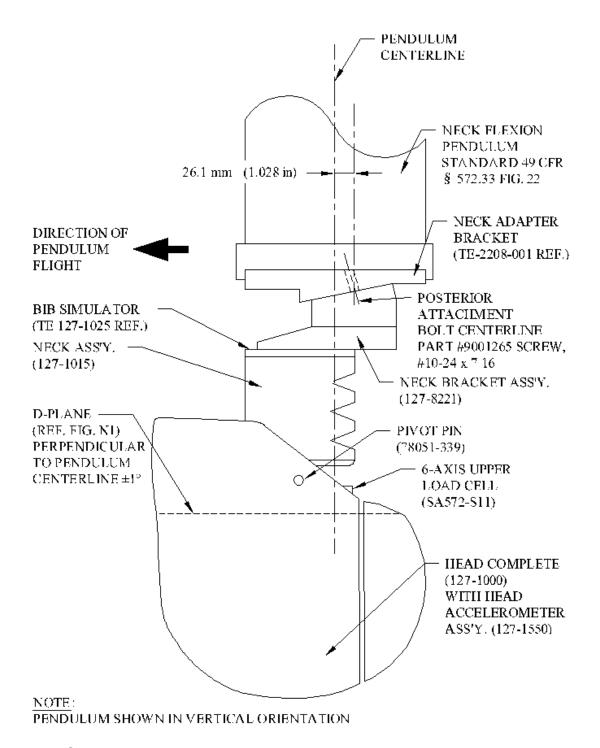


FIGURE 7C

NECK EXTENSION TEST SET-UP SPECIFICATIONS

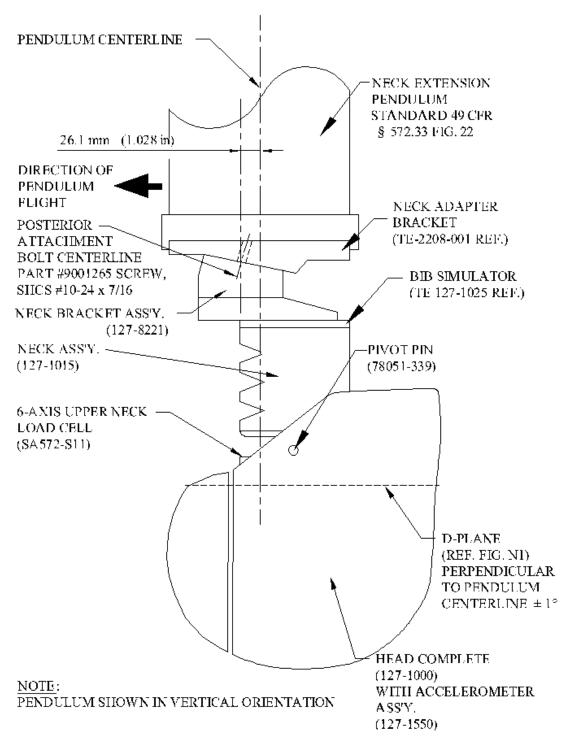


FIGURE 8C


DATA SHEET C6 THORAX IMPACT TEST (572.124)

Dumr	ny Serial Number Test Date
Techr	nician
	etest calibration st test calibration verification
Test a	attempt no (when successive thorax impact tests are necessary)
1234.	N/A, ONLY one thorax impact test performed The test fixture conforms to the specifications in Figure 11C. The complete assembled dummy (127-0000) is used (572.124(b)). The dummy assembly soaked at a temperature between 20.6°C (69°F) and 22.2°C (72°F) and at a relative humidity from 10% to 70% for a period of at least four (4) hours prior to this test. (572.124(c)(1)) Record the maximum temperature Record the minimum temperature Record the minimum humidity Remove the chest skin and visually inspect the thorax assembly for cracks, cuts, abrasions, etc. Particular attention should be given to the rib damping material, chest displacement transducer assembly and the rear rib supports. Inspect for rib deformation using the chest depth gage. If any damage is noted repair and/or replace the damaged components unless the damage resulted from the vehicle crash test in which the dummy was an occupant in which case the damage must be documented and post test calibration verification testing completed before any repairs or replacements are made. No damage Damage from crash test, no repairs or replacement because this is a post test calibration verification. Record damage
	The following repairs or replacement was performed. Record
6.	The dummy is dressed in a size 4 pair of long pants having a weight of less than 0.090 kg (0.2 lb) with the legs cut off sufficiently above the knee to allow the knee target to be visible. (572.124(c)(2))
7.	Seat the dummy, (chest skin still removed) without back support on the test fixture surface as shown in Figure 9C. The surface must be long enough to support the pelvis and outstretched legs. (572.124(c)(2))

8. Level the ribs both longitudinally and laterally ± 0.5° and adjust the pelvis angle to 8° ± 2°. The angle may be measured at the pelvis lumbar joining surface. 9. The midsagittal plane of the dummy is vertical within \pm 1°. (572.124(c)(3)) 10. The longitudinal centerline of the test probe is centered within ±2.5 mm of the midsagittal plane of the dummy and is 12.7 mm ± 1mm below the horizontal peripheral centerline of the No. 3 rib and is within 0.5° of a horizontal line in the dummy's midsagittal plane. (572.124(c)(3)) 11. Record locations such as the rear surfaces of the thoracic spine and the lower neck bracket reference with respect to locations such as the rear surfaces of the thoracic spine and the lower neck bracket. These reference measurements are necessary to ensure the dummy is in the same position after the chest skin is installed. The reference locations must be accessible after installation of the chest skin. It may be necessary to leave the chest skin zipper unfastened until the references are checked and fasten it just prior to the test. 12. Install the chest skin and reposition the dummy as described in the preceding paragraph using the reference measurements recorded. 13. The dummy is dressed in a tight-fitting size 5 short sleeve shirt. (572.124(c)(2)) 14. Place the arm assemblies horizontal ± 2° and parallel to the midsagittal plane. The arms are held in place by tightening the adjustment nut which holds the arm yoke to the clavicle assembly. 15. The data acquisition system, including transducers, must conform to the requirements of SAE Recommended Practice J211/1 MAR95 (572.127(k)) __16. Impact the anterior surface of the thorax with the test probe so the longitudinal centerline of the probe is within 2° of a horizontal line in the dummy's midsagittal plane at the moment of impact. (572.124(c)(4)) The velocity of the test probe at the time of impact is 6.71 m/s \pm 0.12m/s. (572.124(b)) The probe is guided so there is no significant lateral, vertical or rotational movement during the impact. (572.124(c)(5) Neither the suspension hardware, suspension cables, nor other attachments to the probe, including the velocity vane, make contact with the dummy. (572.124(c)(6)

17.	Complete the following table: Therew Irenast Beauty (573 434/b) and 573 434/b)(4) 8 (2)			
ĺ	Thorax Impact Results (572.124(b) and 572.124(b)(1)&(2) Parameter* Specification		Result	
	Test Probe Speed	6.59 m/s ≤ speed ≤ 6.83 m/s	rtooait	
	Chest Compression	38.0 mm ≤ compression ≤ 46.0 mm		
	Peak force** between 38.0 and 46.0 mm chest compression	1150N ≤ peak force ≤ 1380N		
	Peak force** between 12.5 and 38.0 mm chest	Max. 1.05 times the peak force between 38.0 and 46.0 mm chest		
	compression Internal Hysteresis***	compression 65% ≤ hysteresis ≤ 85%		
'	,	ne time of initial contact between the test	probe and the	
	***Area under loading curve the area under the loading	ve minus the area under the unloading cu g curve. (Figure 10C)	rve divided by	
18.	Plots of chest compression sheet.	n, acceleration, force, force versus deflec	tion follow this	
Signa	ture	 Date		

THORAX IMPACT TEST SET-UP SPECIFICATIONS

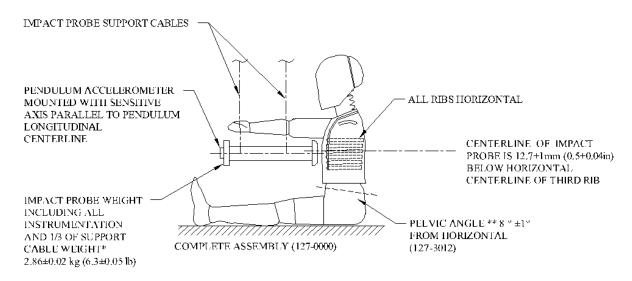

* 1/3 CABLE WEIGHT NOT TO EXCEED 5 % OF THE TOTAL IMPACT PROBE WEIGHT

** PELVIS LUMBAR JOINING SURFACE

Probe specifications:

- 1. Rigid metallic construction, concentric about its longitudinal axis.
- 2. A mass of 2.86 ± 0.02 kg (6.3 ± 0.05 lbs). 1/3 of the weight of the suspension cables and any attachments to the impact probe are included in the calculation of mass, and such components may not exceed 5 percent of the total weight of the test probe.
- 3. Minimum mass moment of inertia of 160 kg-cm² (0.141 lbs-in-sec²) in yaw and pitch about the center of gravity.
- 4. The impacting end of the probe is perpendicular to and concentric with the longitudinal axis. It has a flat, continuous, and non-deformable face with diameter of 101.6 \pm 0.25 mm (4.00 \pm 0.01 in) and a edge radius of 7.6-12.7 mm (0.3-0.5 in).
- 5. The impactor is a cylinder with a diameter of 101-103 mm (4.0-4.1 in) and it is at least 12.5 mm (0.5 in) long.
- 6. The probe's end opposite to the impact face must have provisions for mounting of an accelerometer with its sensitive axis collinear with the longitudinal axis of the probe.
- 7. The impact probe shall have a free air resonant frequency of not less than 1000 Hz in the direction of the longitudinal direction of the impactor.

FIGURE 9C

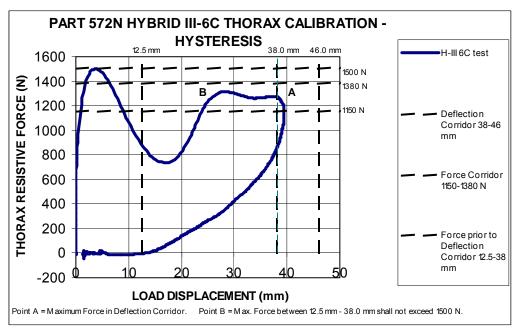


FIGURE 10C

DATA SHEET C7 TORSO FLEXION TEST (572.125)

Dumn	ny Serial Number Test Date
Techn	ician
	test calibration st test calibration verification
Test a	ttempt no (when successive torso flexion tests are necessary)
1.	It has been at least 30 minutes since the last torso flexion test. (572.127(o)) N/A, ONLY one torso flexion test performed
2. 3.	The test fixture conforms to the specifications in Figure 11C. The complete assembled dummy (127-0000) is used (572.125(c)(2)). with legs below the femurs. without legs below the femurs.
4.	The dummy assembly soaked at a temperature between 18.9°C (66°F) and 25.6°C (78°F) and at a relative humidity from 10% to 70% for a period of at least four (4) hours prior to this test. (572.135(c)(1)) Record the maximum temperature Record the minimum temperature Record the maximum humidity Record the minimum humidity
5.	Secure the pelvis to the fixture at the pelvis instrument cavity rear face by threading four ½x20x½ inch cap screws into the available threaded attachment holes. Tighten the mountings so that the test material is rigidly affixed to the test fixture and the pelvic lumbar joining surface is horizontal. (572.125(c)(3))
6.	Attach the loading adapter bracket to the spine of the dummy as shown in Figure 11C. (572.125(c)(6))
7.	Flex the dummy forward and back 3 times such that the angle reference plane moves between 0° and 30° with respect to the vertical transverse plane. (572.125(c)(4))
8.	Support the dummy such that the angle reference plane is at or near 0° (vertical with respect to the vertical transverse plane). Wait at least 30 minutes before continuing. (572.125(c)(4))
	Remove all external support that was implemented in 9 above. (572.125(c)(5)) Measure the initial orientation angle of the torso reference plane of the seated, unsupported dummy. (572.135(c)(5)) Record reference plane angle (max. allowed 22°)
	Attach the pull cable and the load cell. $(572.125(c)(6))$ Apply a tension force in the midsagittal plane to the pull cable at any upper torso deflection rate between 0.5° and 1.5° per second, until the angle reference plane is at $45^{\circ} \pm 0.5^{\circ}$ of flexion relative to the vertical transverse plane. $(572.125(c)(7))$

14.	. Maintain angle reference plane at 45° ± 0.5° of flexion for 10 seconds.			
	(572.125(c)(8))			
15.	5. As quickly as possible release the force applied to the attachment bracket.			
	(572.125(c)(9))			
16.	3 minutes after the release	of the force, measure the re	ference plane angle.	
	(572.125(c)(9))			
17.	Complete the following tab	le:		
	,	2.125(b), 572.125(c)(7), (572	, , , , , ,	
	Parameter	Specification	Result	
	Initial ref. plane angle	Angle ≤ 22°		
	Torso rotation rate	0.5°/s ≤ rate ≤ 1.5°/s		
	Force at 45° ±0.5°	147 N ≤ force ≤ 200 N		
	Final ref. plane angle	Initial ref. plane angle ±8°		
				
Signature		Date		

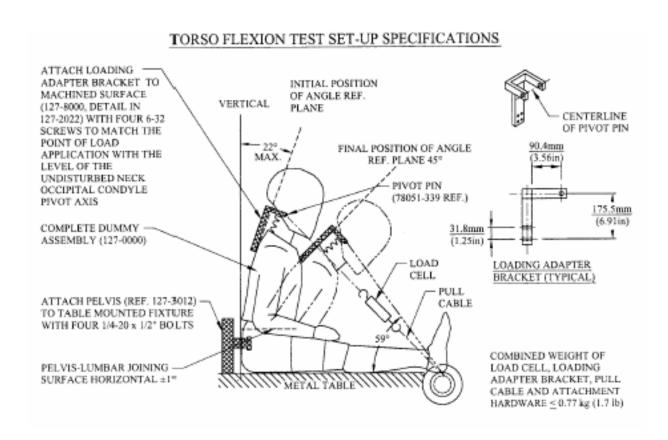


FIGURE 11C

DATA SHEET C8 LEFT KNEE IMPACT TEST (572.126)

Dumn	my Serial Number Test Date	
Techn	nician	
	etest calibration ost test calibration verification	
Test a	attempt no (when successive knee impact tests are necessary)	
1.	. , , , , , , , , , , , , , , , , , , ,	
2. 3.	The knee assembly consisting of the knee machined (127-4013), knee flesh (127-4011),lower leg (127-4014), foot assembly (127-4030-1), and femur loatransducer (SA572-S10) (may use the load cell structural replacement (127-	ad
4.	4007)) were used. (572.126(b)) The knee assembly soaked at a temperature between 18.9°C (66°F) and 25 (78°F) and at a relative humidity from 10% to 70% for a period of at least for hours prior to this test. (572.126(c)(1)) Record the maximum temperature	
	Record the minimum temperature Record the maximum humidity Record the minimum humidity	
5. 6. 7.	• • • • • • • • • • • • • • • • • • • •	e it is
8.		
9.		Class
10.	Contact the knee with the test probe at a speed between 2.07 m/s and 2.13 (572.126(c)(5)) Neither the suspension hardware, suspension cables, nor o attachments to the probe, including the velocity vane, make contact with the dummy. (572.126(c)(6)	ther
11.	. Complete the following table:	

Knee Impact Results (572.126(b)(1) and 572.126(c)(5))

Parameter	Specification	Result
Probe speed	2.07 m/s ≤ speed ≤ 2.13 m/s	
Peak resistance force*	2000 N ≤ force ≤ 3000 N	

*Force = impactor mass	
12. Plots of acceleration ve	rsus time and force versus time follow this sheet.
Signature	Date

DATA SHEET C9 RIGHT KNEE IMPACT TEST (572.126)

Dumn	ny Serial Number Test Date
Techn	nician
	test calibration st test calibration verification
Test a	attempt no (when successive knee impact tests are necessary)
1. 2. 3.	It has been at least 30 minutes since the last knee impact test. (572.127(o)) N/A, ONLY one knee impact test performed The test fixture conforms to the specifications in Figure 12C. The knee assembly consisting of the knee machined (127-4013), knee flesh (127-4011),lower leg (127-4014), foot assembly (127-4030-2), and femur load transducer (SA572-S10) (may use the load cell structural replacement (127-4007)) were used. (572.126(b)) The knee assembly soaked at a temperature between 18.9°C (66°F) and 25.6°C (78°F) and at a relative humidity from 10% to 70% for a period of at least four (4) hours prior to this test. (572.126(c)(1)) Record the maximum temperature Record the minimum temperature
5. 6. 7.	Record the maximum humidity Record the minimum humidity Mount the test specimen and secure it to the rigid test fixture. (572.126(c)(2)) No parts of the foot or tibia contact any exterior surface. (572.126(c)(2)) Align the test probe so that throughout its stroke and at contact with the knee it is within 2 degrees of horizontal and collinear with the longitudinal centerline of the femur. (572.126(c)(3))
8.	The probe is guided so there is no significant lateral, vertical or rotational movement during the impact with the knee. (572.126(c)(4))
9.	The data acquisition system, including transducers, must conform to the requirements of SAE Recommended Practice J211/1 MAR95 (572.127(k)) Class 600.
_	Contact the knee with the test probe at a speed between 2.07 m/s and 2.13 m/s. (572.126(c)(5)) Neither the suspension hardware, suspension cables, nor other attachments to the probe, including the velocity vane, make contact with the dummy. (572.126(c)(6) Complete the following table:
—	complete the following table.

Parameter	Specification	Result
Probe speed	2.07 m/s ≤ speed ≤ 2.13 m/s	
Peak resistance force*	2000 N ≤ force ≤ 3000 N	

*Force = impactor mass	
12. Plots of acceleration ve	rsus time and force versus time follow this sheet.
Signature	Date

KNEE IMPACT TEST SET-UP SPECIFICATIONS PENDULUM ACCELEROMETER TORQUE TWO FEMUR LOAD CELL MOUNTED WITH SENSITIVE AXIS PARALLEL TO PENDULUM LONGITUDINAL SIMULATOR MOUNTING BOLTS (9000535 REF. AND 9000133 REF.) KNEE ASS'Y TO 4.5 Nm (40 in-lb) (P/N 127-4010 REF.) FEMUR LOAD CELL SIMULATOR KNEE (P/N 127-4007 REF.) OR LOAD CELL PIVOT (SA572-S10) HORIZONTAL ±1° RIGID MOUNTING PLATE PENDULUM CENTERLINE LOWER LEG ASS'Y HORIZONTAL ±15 (P/N 127-4014 REF.) KNEE IMPACT PROBE INCL. INSTRUMENTATION AND 1/3 OF SUPPORT CABLE WEIGHT 0.82±.02 kg (1.80±.04 lb) FOOT ASSY ADJUST KNEE JOINT TORQUE (P/N 127-4030-1 REF.) TO 1-2 g RANGE BEFORE EACH TEST.

Probe specifications (572.127(b)):

- 1. Rigid metallic construction, concentric in shape and symmetric about is longitudinal axis.
- 2. A mass of 0.82 ± 0.02 kg (1.8 ± 0.05 lbs). 1/3 of the weight of the suspension cables and any attachments to the impact probe must be included in the calculation of mass, and such components may not exceed 5 percent of the total weight of the test probe.
- 3. Minimum mass moment of inertia of 34 kg-cm² (0.03 lbs-in-sec²) in yaw and pitch about the center of gravity.
- 4. The impacting end of the probe is perpendicular to and concentric with the longitudinal axis. It must have a flat, continuous, and non-deformable face with diameter of $76.2 \pm 0.2 \text{ mm} (3.00 \pm 0.01 \text{ in})$ and an edge radius of 7.6-12.7 mm (0.3-0.5 in).
- 5. The impactor is a cylinder with a diameter of 76-77 mm (3.0-3.1 in) and it is at least 12.5 mm (0.5 in) long.
- 6. The probe's end opposite to the impact face must have provisions for mounting of an accelerometer with its sensitive axis collinear with the longitudinal axis of the probe.
- 7. The impact probe shall have a free air resonant frequency of not less than 1000 Hz in the direction of the longitudinal direction of the impactor.

FIGURE 12C

DATA SHEET C10 PART 572 INSTRUMENTATION CALIBRATION INFORMATION

I.D. NO.	MANUFACTURER	MODEL NO.	SERIAL NO.	DATE OF LAST CALIBRATION	DATE OF NEXT CALIBRATION
		DUMMY INSTRUM	ENTATION		
		HEAD ACCELERO	OMETERS		
(1) LONGITUDINAL					
(2) LATERAL					
(3) VERTICAL					
NECK TRANSDUCER					
		CHEST ACCELER	OMETERS		
(1) LONGITUDINAL					
(2) LATERAL					
(3) VERTICAL					
CHEST POTENTIOMETER					
		FEMUR LOAD	CELLS		
(1) RIGHT FEMUR					
(2) LEFT FEMUR					
		LABORATORY INSTR	UMENTATION		
NECK PENDULUM ACCELEROMETER					
THORAX PENDULUM ACCELEROMETER					
KNEE PENDULUM ACCELEROMETER					
NECK ROTATION TRANSDUCER 1 (OPTIONAL)					
NECK ROTATION TRANSDUCER 2 (OPTIONAL)					

LABORATORY TECHNICIAN:	
LADOINATOINT TEOLINIOIAIN.	